


Headlights

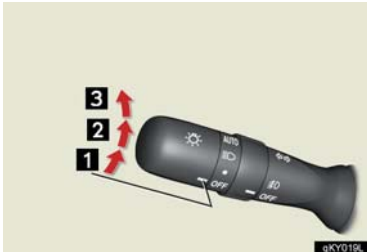

- 1 The instrument panel, side marker, parking, tail and license plate lights turn on.
- 2 The headlights and all lights listed above turn on.
- 3 The headlights and parking lights turn on/off automatically in accordance with ambient light levels.



To engage the high beams, push the lever forward.
To flash the high beams, pull the lever and hold.

■ AFS (Adaptive Front-lighting System) (if equipped)

AFS improves visibility on curves by automatically adjusting the horizontal orientation of the headlights in accordance with vehicle speed and the degree of the tire angle that are controlled by steering input.

The system can be turned on and off using the satellite switch. (→P.21)

Fog Lights



The fog lights can be used only when the headlights (low beam) are on.

Windshield Wipers and Washer

■ Intermittent wiper with interval adjuster (if equipped)



MIST: single wipe

INT: intermittent operation*

LO: low speed

HI: high speed

*: Wiper interval can be adjusted by turning the band.

To spray washer fluid, pull the lever. The wipers will operate automatically.

■ Rain-sensing windshield wipers (if equipped)



MIST: single wipe

AUTO: automatic operation*

LO: low speed

HI: high speed

*: Sensitivity can be adjusted by turning the band.

To spray washer fluid, pull the lever. The wipers will operate automatically.

Headlight Cleaner (If Equipped)



The headlight cleaner can be used only when the "ENGINE START STOP" switch is in IGNITION ON mode and the headlights are on.

Rear Window and Outside Rear View Mirror Defoggers



To defog the rear window and the outside rear view mirrors, press the button.

Press again to cancel.

The system turns off automatically after 15 minutes.

Instrument Panel Light Control



- 1 To dim: turn the dial counterclockwise.
- 2 To brighten: turn the dial clockwise.